

St. Matthew's Church Hall

CENTRAL HEATING

- The Church Hall is heated by a Gas Boiler in the kitchen located on the wall above the refrigerator.
- This boiler heats the radiators throughout the building, the hot water supply to the kitchen taps and also the hot water supply to the washbasins in each of the toilets.

IT IS NOT NECESSARY TO ALTER ANY OF THE CONTROLS ON THE BOILER UNIT.

- The room temperature provided by the Central Heating is adjusted **SOLELY** by use of the room thermostat which is located in the meeting room to the **RIGHT** of the doorway into the entrance lobby.
- **This room thermostat has a default setting of 10 degrees centigrade.**
If this temperature is not suitable at the time of your occupation of the Church Hall then simply adjust the temperature to suit your requirements.

It is imperative that the room thermostat is returned to the default setting at the end of your use of the Church Hall to avoid misuse of energy and in order to accommodate the requirements of subsequent Hall users.

HOT WATER FOR REFRESHMENTS

- Hot water suitable for making Tea, Coffee and any other hot beverages is supplied from the **WATER HEATER** located above the kitchen sink.
- The power supply to this heater is located on the wall beneath the work surface and to the left of the refrigerator. It is labelled appropriately.
- **Please ensure that this water heater is switched off after use to avoid misuse of energy.**

ELECTRIC SUPPLY

- There are a number of 3-pin power sockets throughout the building.